


INSTALLATION GUIDE

- STEP 1: Mark out desired position in benchtop and use cutting template provided to create hole in benchtop to mount basin.
- STEP 2: Install pop up waste & attach to plumbing
- STEP 3: Seal basin to benchtop using recommended silicone

Note: Product requires 400mm deep internal carcass clearance

CUT-OUT TEMPLATE

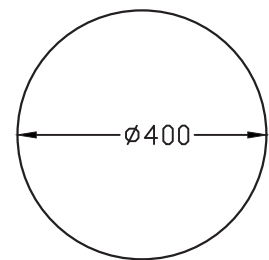

SPECIFICATIONS

RECOMMENDED USE

Domestic

MATERIAL

Solid Surface

INSTALLATION

Semi Inset

WARRANTY

Structure: 5 years | Finish: 5 years